


Installation examples for fixings:  
Exemples de pose des vis :  
**FVO, FV, FVI**



## FVO

**Vertical WC fixing**  
Fixation verticale WC

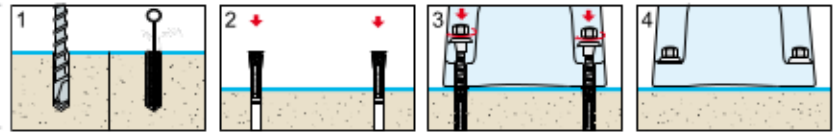

**Nylon plug, white zinc plated brass studscrew  
nickel plated brass cap nut**

Cheville nylon, goujon laiton zingué blanc  
écrou borgne laiton nickelé

Code	Plug Cheville Ø x L	Screw Vis Ø x L	Pkg.	Pkg./ Outerbox Contd.
61500005080	8x40	M5x80	4	50
61500006080	10x50	M6x80	4	50

## FV

**Vertical WC fixing**  
Fixation verticale WC



**Nylon plug, white zinc plated studscrew  
nickel plated brass cap nut**

Cheville nylon, goujon zingué blanc  
écrou borgne laiton nickelé

Code	Plug Cheville Ø x L	Screw Vis Ø x L	Pkg.	Pkg./ Outerbox Contd.
61506b05080	8x40	M5x80	4	50
61506d06070*▲	10x50	M6x70	4	50
61506b06080	10x50	M6x80	4	50

\* Yellow passivated screw / Vis zingué bichromaté

## FVI

**Vertical WC fixing**  
Fixation verticale WC



**Nylon plug, stainless steel studscrew  
nickel plated brass cap nut**

Cheville nylon, goujon en inox  
écrou borgne laiton nickelé

Code	Plug Cheville Ø x L	Screw Vis Ø x L	Pkg.	Pkg./ Outerbox Contd.
61556005080	8x40	M5x80	4	50
61556006080	10x50	M6x80	4	50